



For Professional GAMERS



Powered by TSCCO  
www.tscoco.ir



## GET HELP WITH TSCCO GAME SUPPORT

We're here to assist you with your TSCCO game device. Find register your product, or contact us by phone, chat or e-mail if you have any questions.

<https://service.tscoco.ir/>


# TG 135W GAMING PAD



### محتویات بسته بندی

- TG-135W
- دفترچه راهنما
- کارت گارانتی
- کابل شارژر
- دانگل USB بی سیم
- میدل OTG

### اجزاء محصول

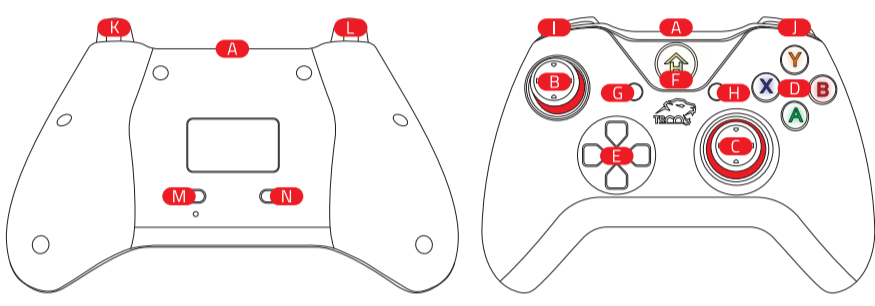


- |                   |              |                       |
|-------------------|--------------|-----------------------|
| A پورت شارژر      | G کلید Back  | M Turbo Key           |
| B جوی استیک چپ    | H کلید Start | N Clear Key           |
| C جوی استیک راست  | I کلید L1    | O Charging Cable      |
| D کلیدهای عملکرد  | J کلید R1    | P Wireless USB Dongle |
| E کلیدهای جهت نما | K کلید R2    | Q OTG Adapter         |
| F کلید Home       | L کلید L2    |                       |

### PACKAGE CONTENT

- TG-135W
- User Manual
- Guarantee Card
- Charging Cable
- Wireless USB Dongle
- OTG Adapter

### WHAT'S INSIDE

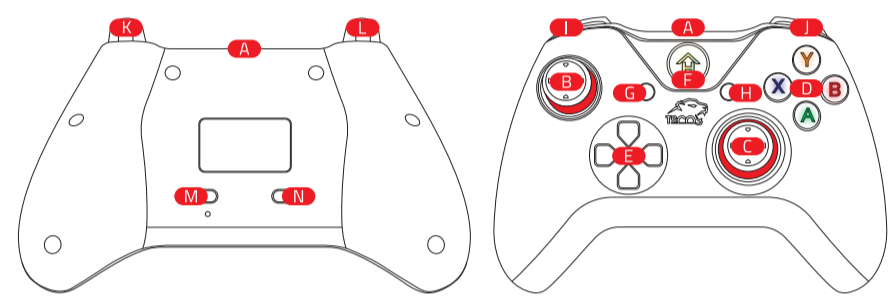

- |                    |             |                       |
|--------------------|-------------|-----------------------|
| A Charging port    | G Back Key  | M Turbo Key           |
| B Left Joystick    | H Start Key | N Clear Key           |
| C Right Joystick   | I L1 Key    | O Charging Cable      |
| D Action Keys      | J R1 Key    | P Wireless USB Dongle |
| E Directional Keys | K R2 Key    | Q OTG Adapter         |
| F Home Key         | L L2 Key    |                       |

### APPROXIMATE SIZE AND WEIGHT

- Length: 155 mm
- Height: 65 mm
- Width: 110 mm
- Weight: 210 g

### TECHNICAL SPECIFICATION

- Connection: 2.4G Wireless Connection
- Number of keys: 17 keys + 2 joysticks
- Compatible with: PC (X-Input & D-Input), Ps3, Android
- Material: ABS

### LET'S GET YOU COVERED

You've got a great device in your hands with an **18 months** limited warranty coverage. For more information please visit [www.tscoco.ir](http://www.tscoco.ir).

To activate your warranty service; Please scan the QR code, which is on the guarantee card. You can also send the serial number which is written on guarantee card or product to **20004243**.



### ابعاد و وزن تقریبی

- طول: ۱۵۵ میلی متر
- ارتفاع: ۶۵ میلی متر
- عرض: ۱۱۰ میلی متر
- وزن: ۲۱۰ گرم

### اطلاعات فنی محصول

- اتصال: اتصال بی سیم ۲٫۴G
- تعداد کلیدها: ۱۷ کلید + ۲ Joystick
- سازگار با: کامپیوتر شخصی (X-Input و D-Input), Ps3, تلفن همراه اندروید
- جنس: ABS

### فعالسازی گارانتی

محصولی که در دست شماست یک گییم پد با **۱۸ ماه گارانتی** است. برای کسب اطلاعات بیشتر درباره محصول، به آدرس [www.tscoco.ir](http://www.tscoco.ir) مراجعه کنید.

جهت فعال سازی گارانتی کد QR روی کارت گارانتی را اسکن نمایید. همچنین می توانید شماره سریال درج شده روی کارت گارانتی یا محصول را به شماره **۲۰۰۰۴۲۴۳** ارسال نمایید.



### سیستم مورد نیاز

#### سیستم مورد نیاز محصول:

- کامپیوتر با پورت USB
- PS3
- تلفن همراه اندروید (پشتیبانی OTG)

### نحوه شارژر محصول

قبل از استفاده، از طریق کابل شارژر، گییم پد را به یک پورت USB وصل کنید. سپس **TG-135W** پس از تقریباً ۳ ساعت، شارژ خواهد شد.

#### نشان گر شارژر

- ۱) باتری خالی: نشان گر RGB خاموش است.
  - ۲) باتری ضعیف: نشان گر RGB چشمک می زند.
  - ۳) شارژ شدن: نشان گر RGB به آرامی چشمک می زند.
- روشن / خاموش کردن (حالت استندبای)**
- ۱) روشن کردن: کلید HOME را برای روشن کردن گییم پد فشار دهید.
  - ۲) خاموش کردن (حالت استندبای): گییم پد بعد از ۵ دقیقه کار نکردن به طور خود کار خاموش خواهد شد. در این حالت، برای فعال کردن مجدد گییم پد، کلید HOME را فشار دهید.

### WHAT'S NEEDED

#### PRODUCT REQUIREMENTS:

- PC with a USB port
- PS3
- Android Device (OTG Support)

### CHARGING YOUR PRODUCT

For first usage, plug in your controller to a powered USB port. It can be charged by using USB Cable.. It takes approximately 3 hours to fully charge your **TG-135W**.

#### Charge Indicator


- 1) No battery: RGB indicator OFF.
- 2) Low battery: The RGB indicator flashing.
- 3) Charging: The RGB indicator flashes slowly.

#### Power ON/OFF (standby mode)

- 1) Power on: Press HOME to start of gamepad.
- 2) Standby mode: After 5 minutes of inactivity, the gamepad will turn off automatically. Press HOME key to restart gamepad.

### SETTING UP

Make sure wireless USB dungle is connected to the USB ports of your device.

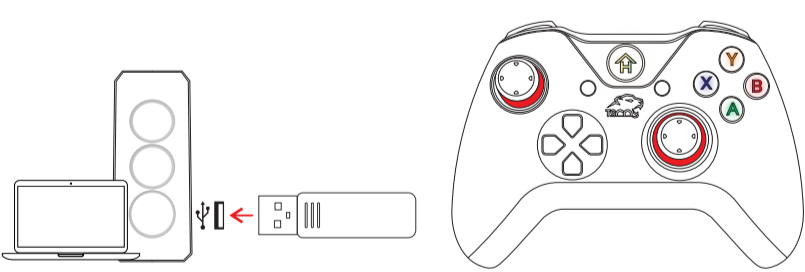

#### First Connection

- 1) Plug the wireless USB dongle into the device, the device will detect the dongle.
- 2) Press HOME to start the gamepad.
- 3) If RGB indicator flashes, gamepad will pair with the wireless USB dongle automatically.
- 4) When the pairing is successful, RGB indicator light will be on.


**Note:** If the pairing is unsuccessful and the gamepad turns off after 30 seconds, please unplug the wireless USB dongle and repeat the above steps again.

#### Mode Switch

- 1) Hold the HOME key about 5 seconds, to switch the mode between Xinput, Directinput.
- Note:** On PC, the Xinput is default mode.
- 2) In Directinput mode, Press HOME key to switch between analog mode and digital mode.

### نحوه راه اندازی

از اتصال دانگل USB بی سیم به پورت USB دستگاه خود، مطمئن شوید.

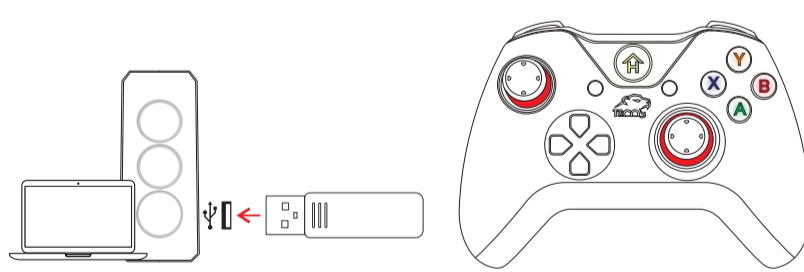

#### اولین اتصال

- ۱) دانگل بی سیم USB را به دستگاه مورد نظر وصل کنید. دستگاه، دانگل را شناسایی می کند.
- ۲) کلید HOME را برای روشن شدن گییم پد فشار دهید.
- ۳) نشان گر RGB فلش زده و گییم پد به طور خود کار به دانگل USB متصل خواهد شد.
- ۴) بعد از اتصال موفق، نشان گر RGB روشن خواهد شد.

**تذکره:** اگر اتصال ناموفق بود و گییم پد بعد از ۳۰ ثانیه خاموش شد لطفاً دانگل بی سیم را از USB جدا کرده و مراحل بالا را مجدد اجرا کنید.

#### تغییر Mode

- ۱) برای تغییر حالت بین Xinput و Dinput، کلید HOME را به مدت ۵ ثانیه نگه دارید.
- تذکره:** در PC، حالت پیش فرض Xinput است.
- ۲) در حالت DirectInput، برای تغییر حالت بین آنالوگ و دیجیتال، کلید HOME را فشار دهید.

### عملکرد Turbo

عملگر Turbo به شما این امکان را می دهد تا یک عملکرد را برای دفعات زیادی تکرار کنید. به بیان دیگر، با نگه داشتن یک کلید در حالت Turbo، عملکرد مربوط به آن کلید، چندین بار تکرار می شود. برای تنظیم عملکرد Turbo، کلیدهای "Turbo + Key" و برای بازگشت به حالت پیش فرض کلیدهای "Clear+Key" را فشار دهید.

### نکات ایمنی

برای استفاده و نگه داری از محصول **TG-135W** دستورالعمل های زیر را دنبال کنید:  
دستگاه را به طور مداوم در دمای کمتر از ۴۰ درجه سانتیگراد (۱۰۴ درجه فارنهایت) یا ۰ درجه سانتیگراد (۳۲ درجه فارنهایت) تا ۴۰ درجه سانتیگراد (۱۰۴ درجه فارنهایت) استفاده کنید. اگر دما از حد مجاز بالاتر رفت، دستگاه را خاموش کرده و اجازه دهید دستگاه به دمای مناسب بازگردد.

### Turbo Function

Turbo is a function that allows you to repeat an action several times. In other words, holding down a key that is activated in turbo mode which allows key to repeat over and over again.

Press "Turbo+Key" to set Turbo function, press "Clear+Key" to get back to default.

### SAFETY GUIDELINES

In order to use **TG-135W** safely, please follow these guidelines:  
If you have trouble operating the **TG-135W** properly and troubleshooting does not work, contact (021)42435000 hotline or go to [service.tscoco.ir](http://service.tscoco.ir) for assistance.  
Do not take apart the device (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.  
Keep the device away from liquid, humidity, or moisture. Use the device only within the specific temperature range up to 0°C (32°F) to 40°C (104°F). If the temperature exceeds this range unplug and/or switch off the device to let the temperature stabilize to an optimal level.